

Installation Manual

CITROEN C3 AIRCROSS 5DR
CIT-C3AC-5-A-18



Shades



Side Shades

Fixing Clips



CL-M12 x 4



Installation

CITROEN C3 AIRCROSS 5DR
CIT-C3AC-5-A-18

Components Needed




Side Shades



CL-M12 x 4

Side Shade Installation

STEP 1

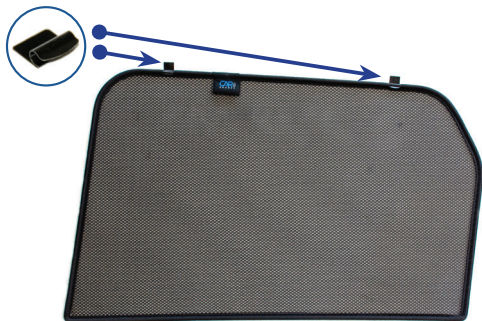

STEP 2



Shade must be fitted from the outside.
Window must be 3/4 of the way down.

STEP 3



STEP 4



STEP 5



STEP 6



Installation

CITROEN C3 AIRCROSS 5DR
CIT-C3AC-5-A-18



Side Shade Installation

STEP 7



STEP 8



View from the inside.
Repeat this whole process for the other side.