


# Installation Manual

**FORD KA 3DR**

**FOR-KA-3-A**




## COMPONENTS INCLUDED

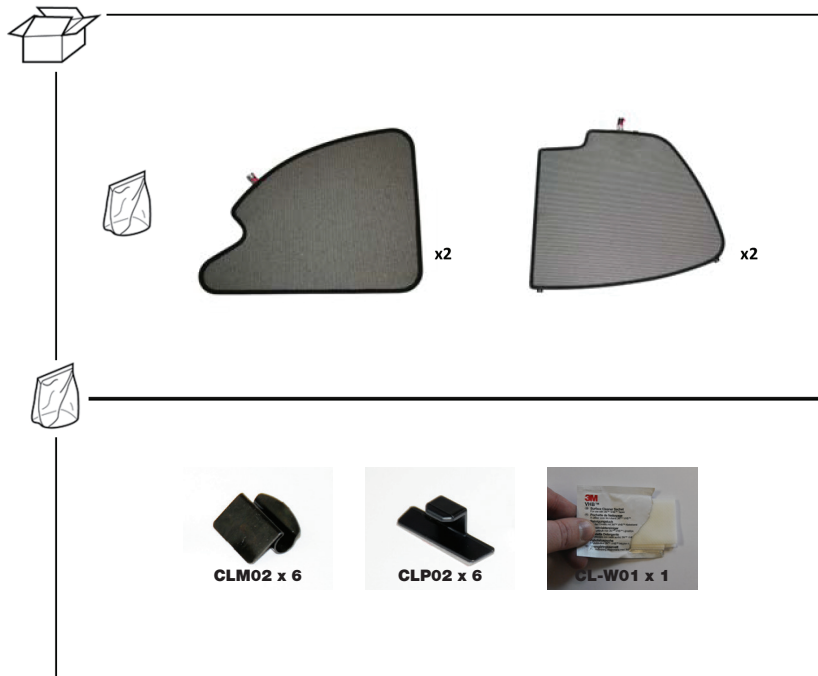

# Installation

FORD KA 3DR

FOR-KA-3-A

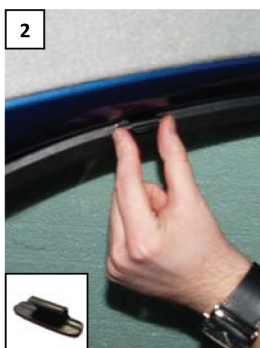


# Installation

FORD KA 3DR

FOR-KA-3-A




1 Attach clips at areas indicated

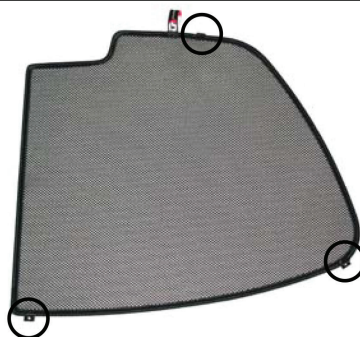

Apply to both rear shades

2

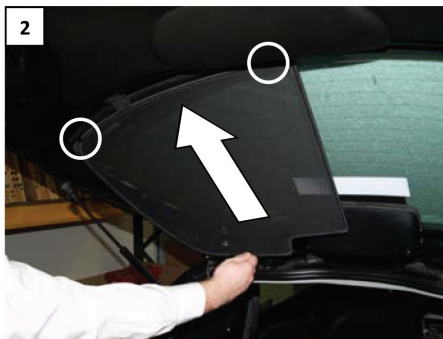

Position clip to sit behind trim



3



Repeat steps 1, 2, 3

