



Installation Manual

BMW MINI COUNTRYMAN 5DR
MIN-COU-5-B



COMPONENTS INCLUDED

SHADES

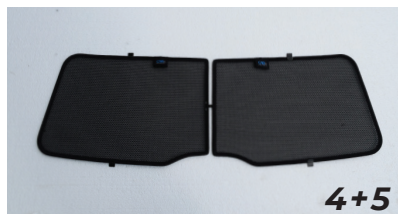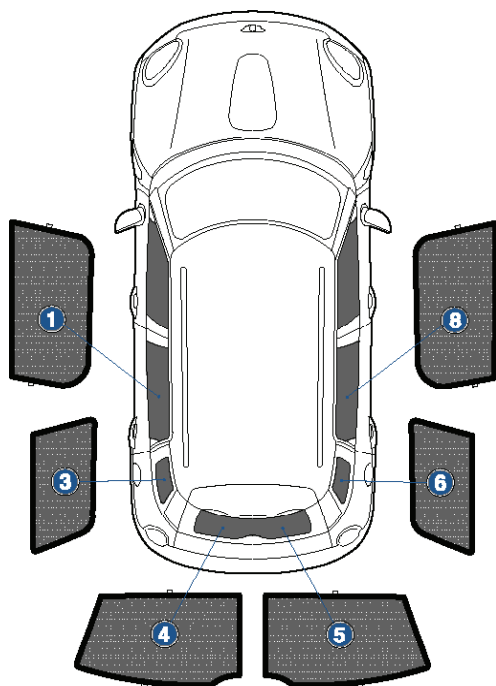

FIXING CLIPS



CL-M02 x 2



CL-M05 x 2



CL-M14 x 1



CL-M12 x 6



CL-T01 x 1

Side Shade Installation

BMW MINI COUNTRYMAN 5DR
MIN-COU-5-B

COMPONENTS NEEDED:




STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #2

POSITION THE SIDE SHADE

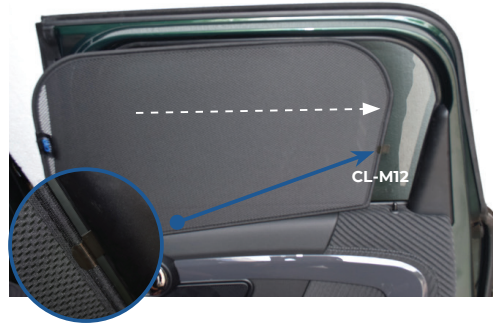


STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

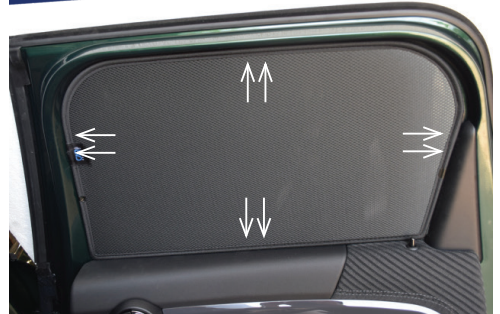

CAR
SHADES

Quarter Light Shade Installation

BMW MINI COUNTRYMAN 5DR
MIN-COU-5-B

COMPONENTS NEEDED:



STEP #1

ATTACH CLIPS ON SHADE EDGES



STEP #2

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #3

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES

Rear Shade Installation

BMW MINI COUNTRYMAN 5DR
MIN-COU-5-B

COMPONENTS NEEDED:




STEP #1

ATTACH CLIPS ON SHADE EDGES



STEP #2

POSITION THE REAR SHADE

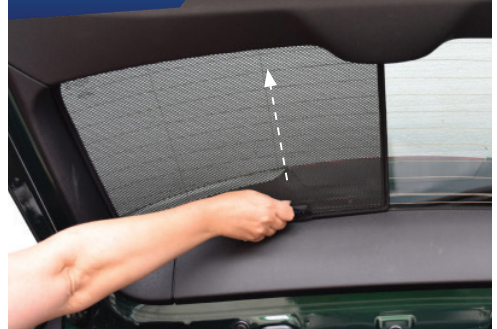


STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #4

REPEAT THE PROCESS ON OTHER SHADE

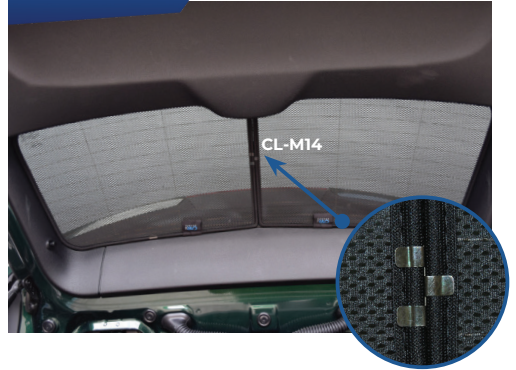

STEP #5

ENSURE SECURELY FITTED IN PLACE

