

Installation Manual

SKODA SUPERB EST
SKO-SUPE-E-C-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M05 x 4



CL-T01 x 1



Side Shade Installation

SKODA SUPERB EST
SKO-SUPE-E-C-18

COMPONENTS NEEDED:



STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP




STEP #2

POSITION THE SIDE SHADE



STEP #3

ATTACH SIDE SHADE BEHIND CLIPS

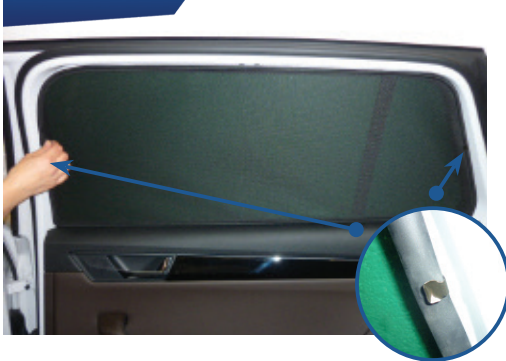

STEP #4

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES